


passend für / to fit

# BMW

## 3'er (E36)


(1990 → 1998)

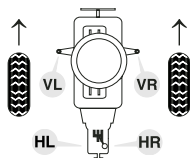

Quality Made For The World

			VL	VR	HL	HR
316 i			20 13 0004 20 13 0004	20 13 0004 20 13 0004	20 13 0026 20 13 0030	20 13 0026 20 13 0030
318 i	Limousine		20 13 0004 20 13 0004	20 13 0004 20 13 0004	20 13 0026 20 13 0030	20 13 0026 20 13 0030
	Limousine		20 13 0004 20 13 0004	20 13 0004 20 13 0004	20 13 0026 20 13 0030	20 13 0026 20 13 0030
	Touring		20 13 0004 20 13 0004	20 13 0004 20 13 0004	20 13 0026 20 13 0030	20 13 0026 20 13 0030
	Touring		20 13 0004 20 13 0004	20 13 0004 20 13 0004	20 13 0026 20 13 0030	20 13 0026 20 13 0030
318 iS	Cabrio		20 13 0004 20 13 0004	20 13 0004 20 13 0004	20 13 0026 20 13 0036	20 13 0026 20 13 0036
	Cabrio		20 13 0004 20 13 0004	20 13 0004 20 13 0004	20 13 0026 20 13 0036	20 13 0026 20 13 0036
318 iS			20 13 0004 20 13 0004	20 13 0004 20 13 0004	20 13 0030 20 13 0036	20 13 0030 20 13 0036
318 tds			20 13 0004	20 13 0021	20 13 0036	20 13 0036



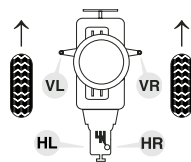

		VL	VR	HL	HR
320 i (mot. M50)  20 13 0039 ②		20 13 0008	20 13 0008	20 13 0026	20 13 0026
	→ 04/93	20 13 0008	20 13 0008	20 13 0032 ①	20 13 0032 ① 20 13 0038 ②
	05/93 →	20 13 0008	20 13 0008	20 13 0026	20 13 0026
320 i (mot. M52)		20 13 0012	20 13 0012	20 13 0026	20 13 0026
325 i  20 13 0039 ②		20 13 0008	20 13 0008	20 13 0026	20 13 0026
	→ 04/93	20 13 0008	20 13 0008	20 13 0032 ①	20 13 0032 ① 20 13 0038 ②
	05/93 →	20 13 0008	20 13 0008	20 13 0026	20 13 0026



① Getriebebefestigung **vorne**

Gearbox fixing **front**

Fixation de boîte à l'**avant**

fijación de los engranajes, **delante**

Dispositivo di fissaggio scatola del cambio **davanti**

② Getriebebefestigung **hinten**

Gearbox fixing **rear**

Fixation de boîte à l'**arrière**

fijación de los engranajes, **detrás**

Dispositivo di fissaggio scatola del cambio **dietro**

**SWAG 20 13 0008**

Ref. No. 11 81 1 140 985



**SWAG 20 13 0012**

Ref. No. 11 81 1 092 583



**SWAG 20 13 0026**

Ref. No. 23 71 1 137 817



36/50 x 34

**SWAG 20 13 0032**

Ref. No. 24 70 1 138 435



36/48 x 34


**SWAG 20 13 0038**

Ref. No. 24 70 1 138 427



**SWAG 20 13 0039**

Ref. No. 24 70 1 138 428

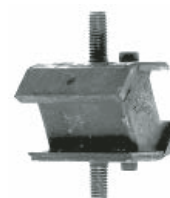


passend für / to fit

# BMW

## 3'er (E36)

(1990 → 1998)

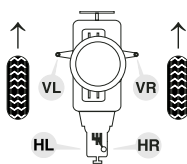

Quality Made For The World

		VL	VR	HL	HR
325 td		20 13 0009	20 13 0009	20 13 0025	20 13 0025
		20 13 0009	20 13 0009	20 13 0028	20 13 0028
325 tds		20 13 0009	20 13 0009	20 13 0025	20 13 0025
		20 13 0009	20 13 0009	20 13 0028	20 13 0028
328 i		20 13 0012	20 13 0012	20 13 0026	20 13 0026
M3		20 13 0044	20 13 0044	20 13 0026	20 13 0026




passend für / to fit

# BMW

## 3'er compact (E36)

(1993 → 2000)

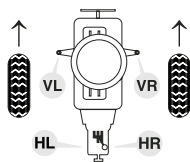

		VL	VR	HL	HR
316 i 1.6		20 13 0004	20 13 0004	20 13 0026	20 13 0026
316 i 1.9		20 13 0004 20 13 0004	20 13 0004 20 13 0004	20 13 0026 20 13 0030	20 13 0026 20 13 0030
318 ti (mot. M42)		20 13 0004	20 13 0004	20 13 0030	20 13 0030
	→ 04/93 05/93 →	20 13 0004 20 13 0004	20 13 0004 20 13 0004	20 13 0036 20 13 0030	20 13 0036 20 13 0030
318 ti (mot. M44)		20 13 0004 20 13 0004	20 13 0004 20 13 0004	20 13 0030 20 13 0026	20 13 0030 20 13 0026
318 tds		20 13 0004	20 13 0021	20 13 0036	20 13 0036
323 ti		20 13 0043	20 13 0043	20 13 0026	20 13 0026

