


passend für / to fit

# CITROEN

## C15

(1984 → 1997)

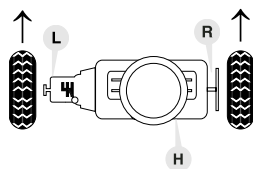

Quality Made For The World

	L	R	H
<b>1.1</b> (mot. TU1M)	62 13 0005	64 13 0004 <b>2</b> 64 13 0003 <b>4</b>	–
<b>1.4</b> (mot. TU3M)	62 13 0005	64 13 0004 <b>2</b> 64 13 0003 <b>4</b>	–
<b>1.8 D</b> (mot. XUD7)	62 13 0005	64 13 0004 <b>2</b> 64 13 0003 <b>4</b>	– <b>1</b> 62 13 0002 <b>3</b>
<b>1.9 D</b> (mot. DW8B)	62 13 0005	64 13 0004 <b>2</b> 64 13 0003 <b>4</b>	62 13 0006 <b>1</b> 62 13 0002 <b>3</b>



**1** für Motorträger  
for engine bracket  
pour traverse de moteur  
para soporte de motor  
per supporto motore

**2** Motorlager  
Engine mount  
Support de Moteur  
Soporte de Motor  
supporto motore

**3** für Gabelgelenk  
for eye joint link  
pour articulation à chape  
para articulación de horquilla  
per snodo a forcella

**4** Anschlag  
Buffer  
Butée  
Tope  
arresto


**SWAG 62 13 0002**  
Ref. No. 1809.04



**SWAG 62 13 0006**  
Ref. No. 1809.21



**SWAG 62 13 0005**  
Ref. No. 1843.95

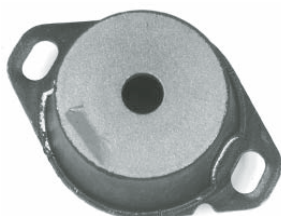

**SWAG 64 13 0003**  
Ref. No. 1844.17



**SWAG 64 13 0004**  
Ref. No. 1844.42

