




		L	R	H
1.6 (mot. 1580 SPI)		64 13 0015	62 13 0006 1 - 3	62 13 0003 1 - 2
1.9 D (mot. XUD9)		64 13 0015	62 13 0003 1 - 2	62 13 0006 1 - 3
1.9 D (mot. DW8 / DW8B)	(ch.) → O 08577	64 13 0015	62 13 0003 1 - 2	62 13 0006 1 - 3
	(ch.) O 08578 →		64 13 0015	64 13 0013 -
1.9 TD (mot. XUD9TE)		64 13 0015	62 13 0003 1 - 2	62 13 0006 1 - 3
2.0 16V (mot. EW10J4)	 (ch.) → O 09015	64 13 0011	64 13 0013 -	62 13 0006 1 3
	 (ch.) O 09016 →	64 13 0015	64 13 0013 -	62 13 0006 1 3
		64 13 0011	- -	62 13 0006 1 3



1 für Motorträger
for engine bracket
pour traverse de moteur
para soporte de motor
per supporto motore

2 Motorlager
Engine Mount
Support de Moteur
Soporte de Motor
supporto motore

3 für Gabelgelenk
for eye joint link
pour articulation à chape
para articulación de horquilla
per snodo a forcella

SWAG 62 13 0003
Ref. No. 1809.16



SWAG 62 13 0006
Ref. No. 1809.21



SWAG 64 13 0011
Ref. No. 1827.16



SWAG 64 13 0013
Ref. No. 1844.92



SWAG 64 13 0014
Ref. No. 1844.93



SWAG 64 13 0015
Ref. No. 1827.10




passend für / to fit

CITROEN

Jumpy

(1994 →)

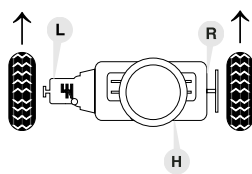

Quality Made For The World

2.0 HDI
(mot. DW10ATED)

2.0 HDI
(mot. DW10BTED / DW10CTED)

2.0 HDI 16V
(mot. DW10ATED4)

L

R

H

64 13 0011

62 13 0003 **1**
- **2**

62 13 0006 **1**
- **3**

64 13 0011

62 13 0003 **1**
- **2**

62 13 0006 **1**
- **3**

64 13 0011

64 13 0014

62 13 0006 **1**
- **3**



1 für Motorträger
for engine bracket
pour traverse de moteur
para soporte de motor
per supporto motore

2 Motorlager
Engine Mount
Support de Moteur
Soporte de Motor
supporto motore

3 für Gabelgelenk
for eye joint link
pour articulation à chape
para articulación de horquilla
per snodo a forcella

SWAG 62 13 0003
Ref. No. 1809.16



SWAG 62 13 0006
Ref. No. 1809.21



SWAG 64 13 0011
Ref. No. 1827.16



SWAG 64 13 0014
Ref. No. 1844.93

