


passend für / to fit

# FIAT

## Scudo (1995 →)

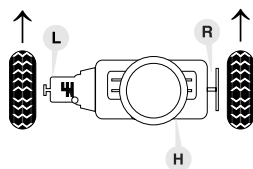

**SWAG**  
Germany

Quality Made For The World

	L	R	H
1.6	64 13 0015	62 13 0006 <b>1</b> - 1 <b>2</b>	62 13 0003 <b>1</b> - <b>2</b>
1.9 D	64 13 0015	62 13 0003 <b>1</b> - 1 <b>2</b>	62 13 0006 <b>1</b> - <b>3</b>
1.9 TD	64 13 0015	62 13 0003 <b>1</b> - 1 <b>2</b>	62 13 0006 <b>1</b> - <b>3</b>
2.0 16V	-	64 13 0013 71	62 13 0006 <b>1</b> - <b>3</b>
2.0 JTD	64 13 0011	62 13 0003 <b>1</b> - 1 <b>2</b>	62 13 0006 <b>1</b> - <b>3</b>



**1** für Motorträger  
for engine bracket  
pour traverse de moteur  
para soporte de motor  
per supporto motore

**2** Motorlager  
Engine Mount  
Support de Moteur  
Soporte de Motor  
supporto motore

**3** für Gabelgelenk  
for eye joint link  
pour articulation à chape  
para articulación de horquilla  
per snodo a forcella

**SWAG 62 13 0003**

Ref. No. 96061 21080



**SWAG 62 13 0006**

Ref. No. 96133 05380



**SWAG 64 13 0011**

Ref. No. 96181 84180



**SWAG 64 13 0013**

Ref. No. 96359 39880



**SWAG 64 13 0015**

Ref. No. 96043 38880

