


passend für / to fit

**FORD**

**Escort 86**  
(01/86 → 07/90)

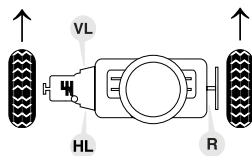






Quality Made For The World

**VL**

**HL**

**R**

			VL	HL	R
<b>Benzin / Gasoline</b>		(Getr.) ATX	<b>50 13 0005</b>	–	–
<b>1.6 D</b>	 	→ 07/88 08/88 →	– –	– <b>50 13 0012</b>	– –
<b>1.8 D</b>	 	→ 07/88 08/88 →	– <b>50 13 0011</b>	– <b>50 13 0012</b>	– –

**SWAG 50 13 0005**  
Ref. No. 6 172 938



**SWAG 50 13 0011**  
Ref. No. 1 661 786



**SWAG 50 13 0012**  
Ref. No. 6 203 710



Der Einbau darf nur durch geschultes Fachpersonal erfolgen. / The installation may exclusively be performed by trained specialist staff.