


passend für / to fit

MERCEDES BENZ

BM 107 (SL)
(1971 → 1989)

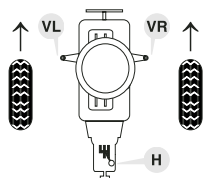

Quality Made For The World

		VL	VR	H
280 SL / SLC (BM. 107.042 / 022)		–	–	10 13 0073
350 SL (BM. 107.043)	(ch.) → 008108 (ch.) 008109 →	– –	– –	10 13 0082 10 13 0073
350 SLC (BM. 107.023)	(ch.) → 001831 (ch.) 001832 →	– –	– –	10 13 0082 10 13 0073
380 SL / SLC (BM. 107.045 / 025)		–	–	10 13 0073
420 SL (BM. 107.047)		–	–	10 13 0073
450 SL (BM. 107.044)	(ch.) → 005813 (ch.) 005814 →	– –	– –	10 13 0082 10 13 0073
450 SLC (BM. 107.024)	(ch.) → 000015 (ch.) 000016 →	– –	– –	10 13 0082 10 13 0073
450 SLC 5.0 (BM. 107.026)		–	–	10 13 0073
500 SL (BM. 107.046)		–	–	10 13 0073
500 SLC (BM. 107.026)		–	–	10 13 0073

