


passend für / to fit

# PEUGEOT

**Boxer**  
(1994 → )



Quality Made For The World

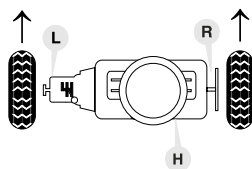

L

R

H

**1.9 D**  
(mot. XUD9)



70 13 0008

70 13 0013

70 13 0010 **1**  
70 13 0006 **2**



70 13 0007

70 13 0013

70 13 0010 **1**  
70 13 0006 **2**

**1.9 TD**  
(mot. XUD9TE)



70 13 0008

70 13 0013

70 13 0010 **1**  
70 13 0006 **2**



70 13 0007

70 13 0013

70 13 0010 **1**  
70 13 0006 **2**

**2.0**  
(mot. XU...)



70 13 0008

70 13 0013

70 13 0010 **1**  
70 13 0006 **2**



70 13 0007

70 13 0013

70 13 0010 **1**  
70 13 0006 **2**

**2.4 D**  
(mot. DJ5)



70 13 0008

70 13 0005

70 13 0010 **1**  
70 13 0006 **2**



70 13 0007

70 13 0005

70 13 0010 **1**  
70 13 0006 **2**

**2.4 TD**  
(mot. DJ5T / DJ5TED)



70 13 0008

70 13 0005

70 13 0010 **1**  
70 13 0006 **2**



70 13 0007


70 13 0005

70 13 0010 **1**  
70 13 0006 **2**

**SWAG 70 13 0005**  
Ref. No. 1827.19



**SWAG 70 13 0006**  
Ref. No. 1846.66

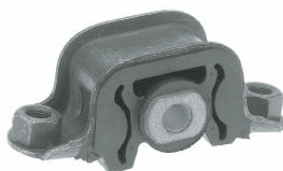

**1** an Motor  
to engine  
sur moteur  
en el motor  
al motore

**2** an Karosserie  
to car body  
sur carrosserie  
en la carrocería  
alla carrozzeria


**SWAG 70 13 0007**  
Ref. No. 1827.17



**SWAG 70 13 0008**  
Ref. No. 1827.18



**SWAG 70 13 0010**  
Ref. No. 1846.65

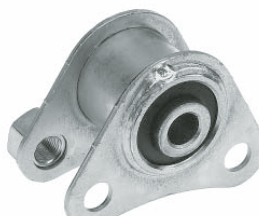

**SWAG 70 13 0013**  
Ref. No. 1844.46

