


passend für / to fit

SAAB

9 3

(1998 → 2002)

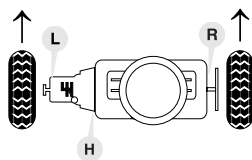

Quality Made For The World

L

R

H

		L	R	H
2.0 i		40 13 0066 -	57 13 0010 57 13 0009	57 13 0005 57 13 0006
2.0 Turbo		40 13 0066 -	57 13 0010 57 13 0009	- 57 13 0006
2.3 i	(ch.) → X 7051397	40 13 0066	57 13 0010	57 13 0005
	(ch.) X 7051398 →	40 13 0066	57 13 0010	-
		-	57 13 0009	57 13 0006

SWAG 40 13 0066
Ref. No. 43 56 176



SWAG 57 13 0005
Ref. No. 42 83 891



SWAG 57 13 0006
Ref. No. 42 83 875



SWAG 57 13 0009
Ref. No. 42 83 743




SWAG 57 13 0010
Ref. No. 42 83 750
















passend für / to fit

SAAB

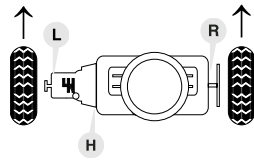9 5
(1998 →)



			L	R	H
2.0		98 → 99	57 13 0014	—	—
		00 → 01	57 13 0013	—	57 13 0015
		98 → 99	—	—	—
		00 →	—	—	57 13 0015
2.3		98 → 99	57 13 0014	—	—
		00 → 01	57 13 0013	—	57 13 0015
		98 → 99	—	—	—
		00 →	—	—	57 13 0015
3.0 V6		98 → 99	57 13 0014	—	—
		00 → 01	57 13 0013	—	57 13 0015
		02 →	—	—	57 13 0015
		98 → 99	—	—	—
		00 →	—	—	57 13 0015

SWAG 57 13 0013
Ref. No. 50 62 021



SWAG 57 13 0014
Ref. No. 49 67 915



SWAG 57 13 0015
Ref. No. 49 67 345

