

passend für / to fit


# SAAB

## 900

(1986 → 1993)



Quality Made For The World

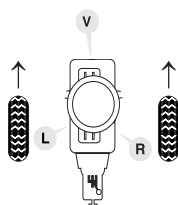

L

R

V

mit hydraulischer Motorlagerung  
with hydraulic engine mounting  
Avec support hydraulique de moteur  
con suspensión hidráulica del motor  
con supporto motore idraulico

alle / all

57 13 0003

57 13 0003

57 13 0007

ohne hydraulischer Motorlagerung  
without hydraulic engine mounting  
Sans support hydraulique de moteur  
sin suspensión hidráulica del motor  
senza supporto motore idraulico

alle / all

–

57 13 0012

–

**SWAG 57 13 0003**  
Ref. No. 75 45 650



**SWAG 57 13 0007**  
Ref. No. 75 45 668




**SWAG 57 13 0012**  
Ref. No. 93 69 315



passend für / to fit

# SAAB

**900**  
(1993 → 1998)

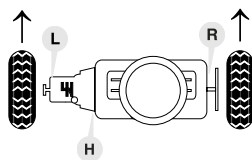

Quality Made For The World

L

R

H

			L	R	H
<b>2.0 i</b> (mot. B 204 I / B 206 I)	96 → 98		40 13 0066	57 13 0010	57 13 0005
	96 → 98		—	57 13 0009	57 13 0006
<b>2.0-16 Turbo</b> (mot. B 204 L)	94 → 95		40 13 0066	57 13 0010	57 13 0005
	96 → 98		40 13 0066	57 13 0010	57 13 0005
<b>2.3-16</b> (mot. B 234 I)	94 → 95		40 13 0066	57 13 0010	57 13 0005
	96 → 98		40 13 0066	57 13 0010	57 13 0005
	96 → 98		—	57 13 0009	—
<b>2.5-24</b> (mot. B 258 I)	94 → 95		40 13 0066	57 13 0010	57 13 0005
	96 → 98		40 13 0066	57 13 0010	57 13 0005
	96 → 98		—	57 13 0009	—

**SWAG 40 13 0066**  
Ref. No. 43 56 176



**SWAG 57 13 0005**  
Ref. No. 42 83 891



**SWAG 57 13 0006**  
Ref. No. 42 83 875



**SWAG 57 13 0009**  
Ref. No. 42 83 743



**SWAG 57 13 0010**  
Ref. No. 42 83 750

