


passend für / to fit

SAAB

9000

(1985 → 1998)

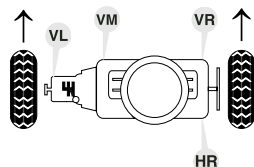

Quality Made For The World

			VL	VM	VR	HR
2.0-16 (mot. B 202...)	85 → 89	(ch.) → G 1027510	–	57 13 0001	57 13 0001	57 13 0011 ① – ②
	85 → 89	(ch.) G 1027511 →	–	57 13 0001	57 13 0001	57 13 0011 ① 57 13 0011 ②
	90 → 93		–	57 13 0002	57 13 0002	57 13 0011 ① 57 13 0011 ②
	94 → 98		–	57 13 0004	57 13 0008	57 13 0011 ① 57 13 0011 ②
2.0-16 (mot. B 204...)			–	57 13 0004	57 13 0008	57 13 0011 ① 57 13 0011 ②
2.3-16 (mot. B 234...)			–	57 13 0004	57 13 0008	57 13 0011 ① 57 13 0011 ②
3.0-24 V6 (mot. B 308 I)			–	57 13 0004	57 13 0008	–



① für Motorträger
for engine bracket
pour traverse de moteur
para soporte de motor
per supporto motore

② für Drehmomentstütze
for torque converter bearing
Pour bras de réaction
para soporte de par de giro
per supporto coppia di serraggio

SWAG 57 13 0001
Ref. No. 75 51 104



SWAG 57 13 0002
Ref. No. 87 86 006



SWAG 57 13 0004
Ref. No. 41 65 510



SWAG 57 13 0008
Ref. No. 41 65 494



SWAG 57 13 0011
Ref. No. 75 76 333

