


passend für / to fit

# SAAB

## 9000

(1985 → 1998)

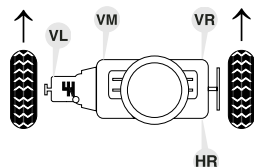

Quality Made For The World

			VL	VM	VR	HR
2.0-16 (mot. B 202...)	85 → 89	(ch.) → G 1027510	–	57 13 0001	57 13 0001	57 13 0011 ① – ②
	85 → 89	(ch.) G 1027511 →	–	57 13 0001	57 13 0001	57 13 0011 ① 57 13 0011 ②
	90 → 93		–	57 13 0002	57 13 0002	57 13 0011 ① 57 13 0011 ②
	94 → 98		–	57 13 0004	57 13 0008	57 13 0011 ① 57 13 0011 ②
2.0-16 (mot. B 204...)			–	57 13 0004	57 13 0008	57 13 0011 ① 57 13 0011 ②
2.3-16 (mot. B 234...)			–	57 13 0004	57 13 0008	57 13 0011 ① 57 13 0011 ②
3.0-24 V6 (mot. B 308 I)			–	57 13 0004	57 13 0008	–



① für Motorträger  
for engine bracket  
pour traverse de moteur  
para soporte de motor  
per supporto motore

② für Drehmomentstütze  
for torque converter bearing  
Pour bras de réaction  
para soporte de par de giro  
per supporto coppia di serraggio

**SWAG 57 13 0001**  
Ref. No. 75 51 104



**SWAG 57 13 0002**  
Ref. No. 87 86 006



**SWAG 57 13 0004**  
Ref. No. 41 65 510



**SWAG 57 13 0008**  
Ref. No. 41 65 494



**SWAG 57 13 0011**  
Ref. No. 75 76 333

