


passend für / to fit

# VOLVO

**940 / 960**  
(1991 → 1998)

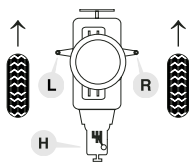

Quality Made For The World

L

R

H

<b>2.0</b> (mot. B200) (ex. Turbo)		Limousine (ch.) → 174345	–	–	–
		Limousine (ch.) 174346 →	55 13 0017	55 13 0017	–
		Kombi (ch.) → 117387	–	–	–
		Kombi (ch.) 117388 →	55 13 0017	55 13 0017	–
			55 13 0001	55 13 0001	–
		91 → 93	55 13 0017	55 13 0017	–
<b>2.0 Turbo</b> (mot. B200FT)		Limousine (ch.) → 255874	55 13 0001	55 13 0001	–
		94 → 98	55 13 0001	55 13 0017	–
		Limousine (ch.) 255875 →			
		Kombi (ch.) → 174441	55 13 0001	55 13 0001	–
		94 → 98	55 13 0001	55 13 0017	–
		Kombi (ch.) 174442 →			
		91 → 93	55 13 0017	55 13 0017	–
		Limousine (ch.) → 255874	55 13 0017	55 13 0017	–
		94 → 98	55 13 0001	55 13 0017	–
		Limousine (ch.) 255875 →			
		Kombi (ch.) → 174441	55 13 0017	55 13 0017	–
		94 → 98	55 13 0001	55 13 0017	–
		Kombi (ch.) 174442 →			
<b>2.0 Turbo</b> (mot. B204FT)			55 13 0004	55 13 0004	–
<b>2.3</b> (mot. B230E, FD,FS,GS)		Limousine (ch.) → 174345	–	–	–
		Limousine (ch.) 174346 →	55 13 0017	55 13 0017	–
		Kombi (ch.) → 117387	–	–	–
		Kombi (ch.) 117388 →	55 13 0017	55 13 0017	–
			55 13 0001	55 13 0001	–




Der Einbau darf nur durch geschultes Fachpersonal erfolgen. / The installation may exclusively be performed by trained specialist staff.

passend für / to fit

# VOLVO

## 940 / 960


(1991 → 1998)

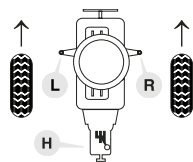

Quality Made For The World

				L	R	H
<b>2.3</b> (mot. B230FB)		91 → 93		55 13 0017	55 13 0017	–
		94 → 98	Limousine (ch.) → 174345	–	–	–
		94 → 98	Limousine (ch.) 174346 →	55 13 0017	55 13 0017	–
		94 → 98	Kombi (ch.) → 117387	–	–	–
		94 → 98	Kombi (ch.) 117388 →	55 13 0017	55 13 0017	–
				55 13 0017	55 13 0017	–
<b>2.3 Turbo</b> (mot. B230FT, GT, GK)		91 → 93		55 13 0017	55 13 0017	–
		94 → 98	Limousine (ch.) → 255874	55 13 0001	55 13 0001	–
		94 → 98	Limousine (ch.) 255875 →	55 13 0001	55 13 0017	–
		94 → 98	Kombi (ch.) → 174441	55 13 0001	55 13 0001	–
		94 → 98	Kombi (ch.) 174442 →	55 13 0001	55 13 0017	–
		91 → 93		55 13 0017	55 13 0017	–
		94 → 98	Limousine (ch.) → 255874	55 13 0017	55 13 0017	–
		94 → 98	Limousine (ch.) 255875 →	55 13 0001	55 13 0017	–
		94 → 98	Kombi (ch.) → 174441	55 13 0017	55 13 0017	–
		94 → 98	Kombi (ch.) 174442 →	55 13 0001	55 13 0017	–
<b>2.3 Turbo</b> (mot. B230FK)		94 → 98	Limousine (ch.) → 255874	55 13 0001	55 13 0001	–
		94 → 98	Limousine (ch.) 255875 →	55 13 0001	55 13 0017	–
		94 → 98	Kombi (ch.) → 174441	55 13 0001	55 13 0001	–
		94 → 98	Kombi (ch.) 174442 →	55 13 0001	55 13 0017	–
		94 → 98	Limousine (ch.) → 255874	55 13 0001	55 13 0001	–
		94 → 98	Limousine (ch.) 255875 →	55 13 0001	55 13 0017	–
		94 → 98	Kombi (ch.) → 174441	55 13 0001	55 13 0001	–
		94 → 98	Kombi (ch.) 174442 →	55 13 0001	55 13 0017	–

**SWAG 55 13 0001**  
Ref. No. 1378657

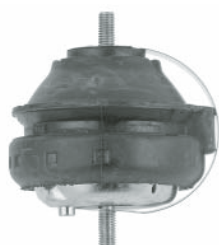

**SWAG 55 13 0017**  
Ref. No. 1329428




passend für / to fit

# VOLVO

## 940 / 960

(1991 → 1998)

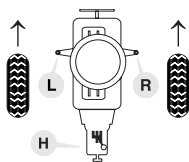

Quality Made For The World

L

R

H

55 13 0002

55 13 0002

–

55 13 0017

55 13 0017

–

55 13 0017

55 13 0017

–

55 13 0002

55 13 0002

–

55 13 0002

55 13 0002

–

**2.4**

(mot. B6244)

**2.4 D**

(mot. D24)

**2.4 TD**

(mot. D24T, TIC)

**2.5**

(mot. B6254)

**2.9**

(mot. B6304)

**SWAG 55 13 0002**

Ref. No. 3536226



**SWAG 55 13 0017**

Ref. No. 1328857

