


passend für / to fit

# VOLKSWAGEN

## Corrado

(1989 → 1995)

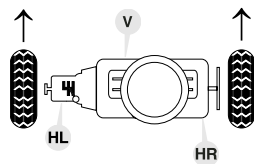

Quality Made For The World

	HL	HR	V
<b>1.8 16 V</b> (mot. KR)	30 13 0085	30 13 0023	30 13 0010
<b>1.8 G60</b> (mot. PG)	30 13 0085	30 13 0023	30 13 0010
<b>2.0</b> (mot. ADY / 2E)	30 13 0085	30 13 0023	30 13 0010
<b>2.0 16 V</b> (mot. 9A)	30 13 0085	30 13 0023	30 13 0010
<b>2.9 VR6</b> (mot. ABV)	30 13 0013	—	—

**SWAG 30 13 0010**  
Ref. No. 357 199 279 B

grün / green



**SWAG 30 13 0013**  
Ref. No. 3A0 199 402

blau / blue



**SWAG 30 13 0023**  
Ref. No. 535 199 262

grün / green



**SWAG 30 13 0085**  
Ref. No. 357 199 381 C

