








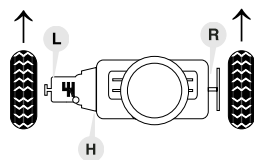

passend für / to fit

VOLKSWAGEN

Sharan 1
(1996 → 2000)



Quality Made For The World

		L	R	H
1.8 20V (mot. AJH)	 	30 13 0089 —	— —	— —
1.9 TDI 90 (mot. 1Z / AHU)		50 13 0015	—	—
1.9 TDI 90 (mot. ANU)		30 13 0090	—	—
1.9 TDI 110 (mot. AFN / AVG)	 	30 13 0090 —	— —	— —
2.0 (mot. ADY)	 	50 13 0015 50 13 0014	— —	— —
2.8 VR6 (mot. AAA / AMY)	 	50 13 0015 50 13 0014	— —	— —

SWAG 30 13 0089

Ref. No. 7M0 199 131 AS



SWAG 30 13 0090

Ref. No. 7M0 199 131 AP



SWAG 50 13 0014

Ref. No. 7M0 199 131 AM



SWAG 50 13 0015

Ref. No. 7M0 199 131 AF

